


مشاوره، نظارت و اجرای سیستم‌های آتش‌نشانی



آبادگستر تاسیسات ایرانیان (آتا)
Abad Gostar Tasisat Iranian Co., LTD

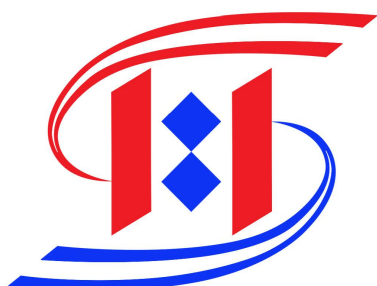


فروش و تجهیز سیستم‌های اعلام و اطفاء حریق

آدرس دفتر مرکزی: ایران - تهران - بزرگراه شهید آیت الله اشرفی اصفهانی - خیابان پیامبر شرقی
خیابان شاهد - خیابان گلستان بیست و ششم - پلاک یک - واحد پنج - کد پستی ۱۴۷۳۶۸۷۷۸۵
تلفن همراه: +۹۸۹۳۹۹۶۰۳۸۰۰


تلفن دفتر مرکزی: ۹۱۰۹۲۰۷۶ - ۹۸۲۱+

آدرس پست الکترونیکی: info@atapars.com


آدرس سایت: www.atapars.com

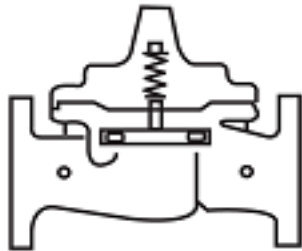

Installation

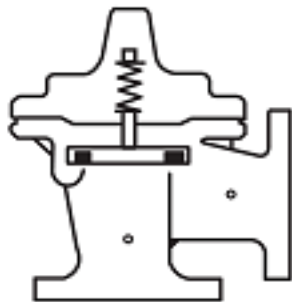

Operation

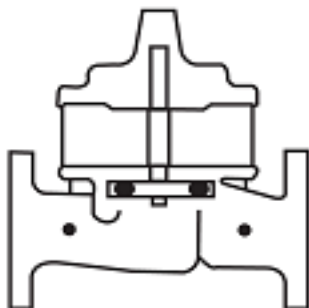

Maintenance



CLA-VAL • 1701 Placentia Avenue • Costa Mesa, CA 92627 • (949) 722-4800 • info@cla-val.com
CLA-VAL CANADA LTD. • 4687 Christie Drive • Beamsville, Ontario, LOR 1B4 Canada • (905) 563-4963
www.cla-val.com • info@cla-val.com



شرکت آبادگستر تاسیسات ایرانیان

آدرس دفتر مرکزی: ایران - تهران - بزرگراه شهید آیت الله اشرفی اصفهانی - خیابان پیامبر شرقی
خیابان شاهد - خیابان گلستان بیست و ششم - پلاک یک - واحد پنج - کد پستی ۱۴۷۳۶۸۷۷۸۵
تلفن دفتر مرکزی: ۹۱۰۹۲۰۷۶ - ۹۸۸۲۱
تلفن همراه: ۹۸۹۳۹۹۶۰۳۸۰۰
آدرس پست الکترونیکی: info@atapars.com
آدرس سایت: www.atapars.com



UL Listed Pressure Reducing Valve

capable of holding downstream pressure to a predetermined pressure.

1.

minimum 1/2" pressure relief valve is to be installed downstream (sys-

The Cla-Val 90-21 Pressure Reducing Valve is a pilot-operated regulator,

Special Note: For system protection, on valve sizes 1-1/2" thru 8" a 12" valve sizes.

2. A 1/2" or 3/4" pressure relief valve is recommended for the downstream side of the 90-21. Adequate drainage of the relief valve discharge must be provided. The relief valve should be installed on both ends of "end" shutoff pressure which is recommended at 5 to 10 psi higher than the set point pressure. 1-1/2" thru 8" valve sizes and 2 psi for 10" and 12" valve sizes.

4. BEFORE THE VALVE IS INSTALLED, PIPE LINES SHOULD BE FLUSHED OF ALL CHIPS, SCALE, AND FOREIGN MATTER.

5. Place the 90-21 valve in the line with flow through the valve in the the 90-21 valve to facilitate isolating the valve for start-up, testing and

all fittings and hardware for proper makeup and that no apparent damage is evident.

6. Cla-Val valves operate with maximum efficiency when mounted in horizontal piping with the cover UP; however, other positions are acceptable as indicated on the inlet nameplate mounted on inlet flange or by arrow on nameplate mounted on side of threaded ends valves. Check

makes periodic inspection of internal parts readily accessible.

Start-Up and Adjustment

1. Upon initial start-up and after any valve servicing, it is necessary to follow these steps and weight of cover and internal components of six inch and larger valves, installation with the cover up is advisable. This 2. Prior to pressurizing the valve make sure the necessary gauges to

body can be used for this purpose.

may be discharged downstream. Gauges should be installed the downstream and downstream (valve) prevent damage to personnel and equipment.

Caution: upstream and downstream isolation valves.

4. Slowly open the upstream isolation valve enough to allow the valve and pilot control system to fill with liquid.

5. Bleed air from the main valve (1) cover and pilot system by slightly

is observed retighten. It may be necessary to do this more than once.

6. Open fully the upstream isolation valve.

to serving fittings or downstream high points and partially to serve low flow rate.

adjustments.

There must be liquid flowing through the valve during pressure

8. Adjust the CRD Control (3) to desired pressure. To change pressure setting, turn the adjusting screw in (clockwise) to increase delivery pressure.

Turn the adjusting screw out (counterclockwise) to decrease delivery pres-

slight changes in adjustment should be made to avoid damage to equip-

replace cover.

9. For 1-1/2" thru 8" 90-21 Pressure Reducing Valves the downstream

(3) set point. For 10" and 12" 90-21 Pressure Reducing Valves the recure. The pressure should change approximately 27 psi per turn. Only valve for the 10" and 12" 90-21 should be installed a recommended minimum of a pipe diameter downstream of the 90-21, tighten jam nut and

above the set pressure. Pressure relief control recommended set point is 2-8 psi above the CRD

1. The Cla-Val 90-21 Pressure Reducing Valve requires no lubrication or

NOTE: The efficiency of the valve is minimum pressure will be 11 psi

2. When servicing the pilot control system, use care to prevent damage.

clean and replaced exactly as they were.

Repair and a minimum of maintenance. However, a periodic inspection schedule should be established to determine how the fluid handled is and pilot control components are included in a more detailed IOM man-

obtained by contacting a Cla-Val Regional Sales Office.

It is necessary to remove fittings or components, be sure they are kept

4. When ordering parts always refer to the catalog number and stock number on the valve nameplate.

SYMPTOM	PROBABLE CAUSE	REMEDY
Main valve fails to open	No pressure at valve inlet	Check inlet pressure
	inoperative	stem, replace defective parts
	Pilot Valve (CRD) not opening: 1. No. spring compression 2. Damaged spring 3. Diaphragm assembly 4. Yoke dragging on inlet nozzle	1. Tighten adjusting screw 2. Disassemble and replace 3. Disassemble and polish 4. Assemble properly
Main valve fails to close	Flow Clean Strainer plugged	Remove and clean or replace
	Pilot Valve (CRD) remains open: 1. Spring compressed solid on stem or Diaphragm ruptured 2. Mechanical obstruction	Disassemble main valve, remove main adjusting screw and replace defective parts 2. Disassemble and remove obstruction 3. Disassemble remove and replace disc retainer assembly 4. Assemble properly
	3. Worn disc	
	4. Yoke dragging on inlet nozzle	
	5. Diaphragm damaged or loose	5. Disassemble. replace diaphragm and/or tighten nut
	vent hole in cover	
Fails to Regulate	Diaphragm nut. Leakage from	Loosen top cover plug and fittings and bleed air
	or in main valve cover and/or inlet nozzle	Assemble properly

Pilot Valve (CRD) yoke dragging



شرکت آبادگستر تاسیسات ایرانیان

آدرس دفتر مرکزی: ایران - تهران - بزرگراه شهید آیت الله اشرفی اصفهانی - خیابان پیامبر شرقی

خیابان شاهد - خیابان گلستان بیست و ششم - پلاک یک - واحد پنج - کد پستی ۱۴۷۳۶۸۷۷۸۵


تلفن همراه: ۰۹۸۹۳۹۹۶۰۳۸۰۰

تلفن دفتر مرکزی: ۰۹۱۰۹۲۰۷۶ - ۰۹۸۲۱

آدرس پست الکترونیکی: info@atapars.com

آدرس سایت: www.atapars.com

90-21 UL SCHEMATIC

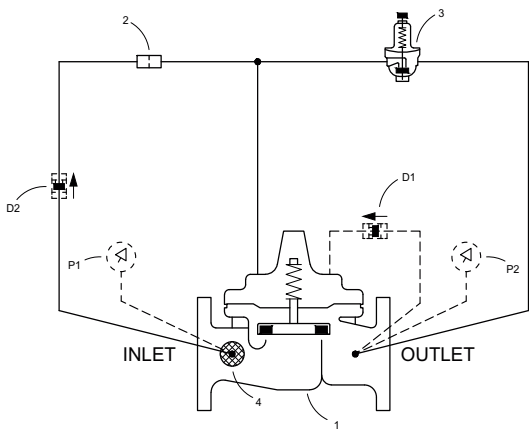


BASIC COMPONENTS

- 1 100-01 Hytrol (Main Valve)
- 2 X58C Restriction Fitting
- 3 CRD Pressure Reducing Control
- 4 X46A Flow Clean Strainer


OPTIONAL FEATURES

- P X141 Pressure Gauge
- D CDC Check Valve


HYTROL MAIN VALVE (1)

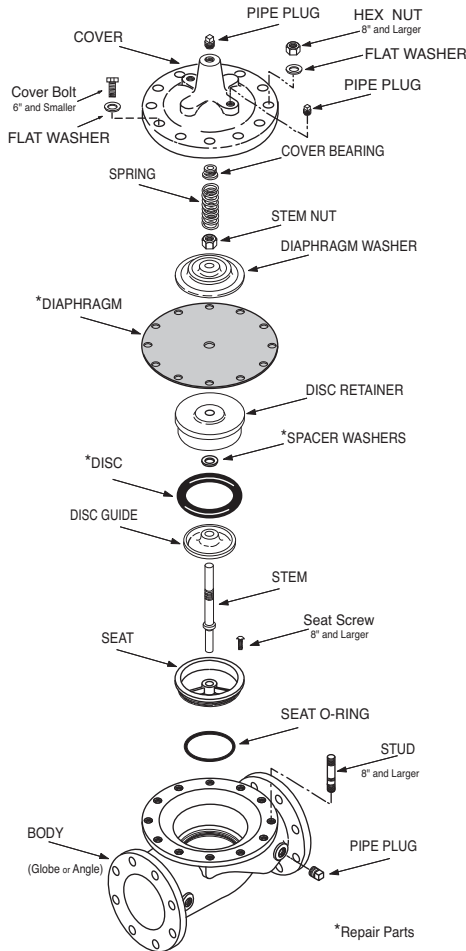

X58C (2)

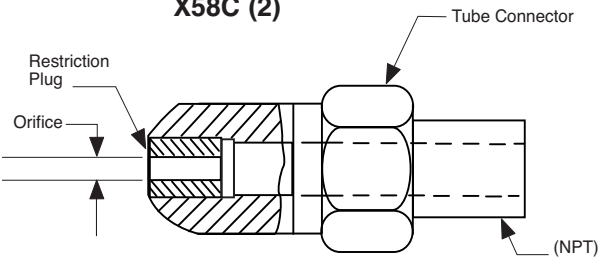

CRD (3)

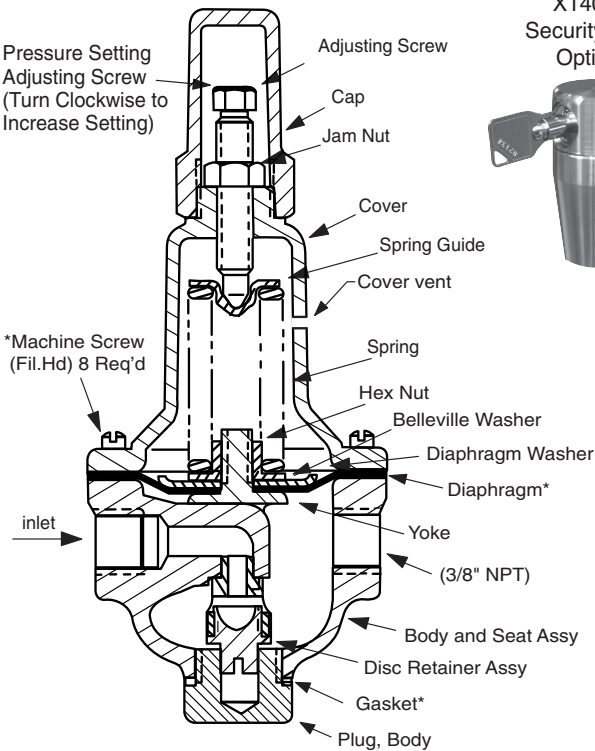

X140-1 Security Cap Option



Minimum Recommended Flow When Setting Pressure

Valve Size (inch)	Min. Flow (GPM)
1-1/2	16
2	26
2-1/2	37
3	57
4	100
6	220
8	390
10	620
12	880

P1 & P2



X58C (2)



X46A (4)



*SUGGESTED REPAIR PARTS

For a more detailed IOM Manual go to www.cla-val.com or contact a Cla-Val Regional Sales Office.


— — — — NOT FURNISHED BY CLA-VAL CO.

— — — — — OPTIONAL FEATURES

UL listed model numbers:

90G-21, Globe

90A-21, Angle

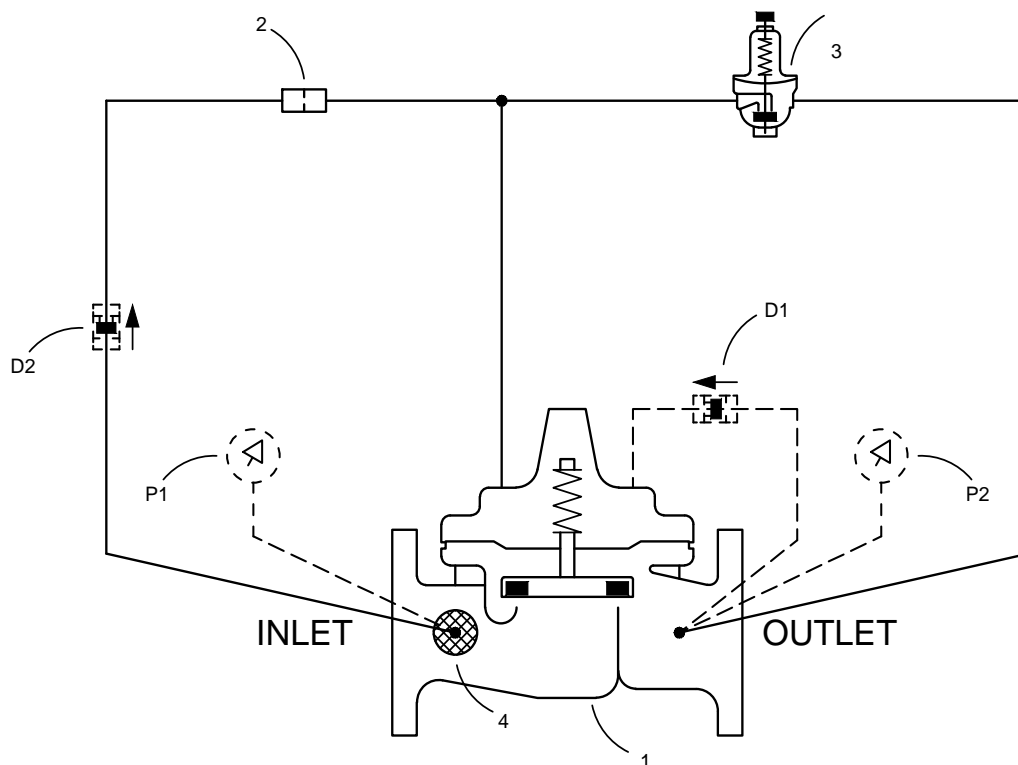

Note: For steel and ductile iron 300 valves, use CRDKX [with special diaphragm washer, yoke, and screws (30-165) and (30-175)]

All sizes, KX = Red paint

*Also 300F only KX = High-strength bolts/studs and nuts

NO.	BASIC COMPONENTS	QTY
1	*100-01KX HYTROL MAIN VALVE	1
2	X58C RESTRICTION ASSEMBLY	1
3	CRD PRESSURE REDUCING CONTROL (SEE NOTE)	1
4	X46A FLOW CLEAN STRAINER	1

NO.	OPTIONAL FEATURES	QTY
D	CHECK VALVES	2
P	X141 PRESSURE GAUGE ASSEMBLY	2

[illegible]

Model 90-21

Pressure Reducing Valve
"Underwriters Laboratories Listed"



► OPERATING DATA

Pressure Reducing Feature

Pressure reducing control (3) is a normally open control that responds to main valve outlet pressure changes. An increase in outlet pressure tends to close control (3) and a decrease in outlet pressure tends to open control (3). This causes main valve cover pressure to vary and the main valve modulates (opens and closes), maintaining a relatively constant outlet pressure. **Pressure reducing control (3) adjustment:** Turn the adjusting screw clockwise to increase the setting.

Optional Features

(D) - Check Valves Valve:

When outlet pressure is higher than inlet pressure, check valve (D1) opens and check valve (D2) closes. This directs the higher outlet pressure into the main valve cover and the main valve closes.

(P) - Pressure Gauge:

Pressure gauges (P1) and (P2) provide pressure reading in the inlet and outlet connections.

► CHECK LIST FOR PROPER OPERATION

- ☐ System valves open upstream and downstream.
- ☐ Air removed from the main valve cover and pilot system at all high points.

90G-21 and 90A-21 Approvals

UL Listed

Ductile iron flanged/Grooved valve:
Flanged class: 150F/300F (250, 300 psi max)
Grooved class: 300V (300 psi max)
(CRD 30-165)

Pattern	Size	P/C
Globe	1 1/2" - 8"	150F
Angle	2" - 8"	150F
Globe	1 1/2" - 6"	300F
Angle	2" - 6"	300F
Globe	1 1/2" - 6"	300V
Angle	2" - 4"	300V

Cast steel valves 300 psi max
(CRD 30-165)

Pattern	Size	P/C
Globe	1 1/2"	300S
Globe	2" - 6"	300F
Angle	1 1/2"	300S
Angle	2" - 6"	300F



شرکت آبادگستر تاسیسات ایرانیان

آدرس دفتر مرکزی: ایران - تهران - بزرگراه شهید آیت الله اشرفی اصفهانی - خیابان پیامبر شرقی

خیابان شاهد - خیابان گلستان بیست و ششم - پلاک یک - واحد پنج - کد پستی ۱۴۷۳۶۸۷۷۸۵

تلفن همراه: +۹۸۹۳۹۹۶۰۳۸۰۰

تلفن دفتر مرکزی: +۹۸۲۱ - ۹۱۰۹۲۰۷۶

آدرس پست الکترونیکی: info@atapars.com

آدرس سایت: www.atapars.com

Model 90-21

Pressure Reducing Valve
"Underwriters Laboratories Listed"



► OPERATING DATA - CONTINUED

Ductile iron/Cast steel:
Class 150, DI: 250 psi max
Class 150, STL: 285 psi max
Class 300, DI/STL: 300 psi max
(CRD 30-175)

Pattern	Size	P/C
Globe	10", 12"	150F
Angle	10", 12"	150F
Globe	10", 12"	300F
Angle	10", 12"	300F

ULC Listed
Ductile iron valve:
Class 150: 250 psi max
Class 300: 300 psi max

Pattern	Size	P/C
Globe	1 1/2" - 12"	150A
Globe	1 1/2" - 3"	300S
Globe	1 1/2" - 12"	300F
Angle	1 1/2" - 12"	150A
Angle	1 1/2" - 3"	300S
Angle	1 1/2" - 12"	300F



MODEL

100-01 UL

Hytrol Valve

For Model 90-21 UL Listed Pressure Reducing Valve

Description

The Model 100-01 Hytrol Valve is the main valve for the Cla-Val Model 90-21 Pressure Reducing Control Valve. It is a hydraulically operated, diaphragm-actuated, globe or angle pattern valve.

This valve consists of three major components; body, diaphragm assembly, and cover. The diaphragm assembly is the only moving part. The diaphragm assembly uses a diaphragm of nylon fabric bonded with synthetic rubber. A synthetic rubber disc, contained on three and one half sides by a disc retainer and disc guide, forms a seal with the valve seat when pressure is applied above the diaphragm. The diaphragm assembly forms a sealed chamber in the upper portion of the valve, separating operating pressure from line pressure.



Troubleshooting

The following trouble shooting information deals strictly with the "Hytrol Valve." This assumes that everything but the main valve itself has been completely isolated, i.e., each part of the control system is hydraulically blocked from the Hydro valve. All troubleshooting is possible without removing the valve from the line or removing the cover.

The Hytrol valve has only one moving part (the diaphragm and disc assembly). So, there are only three major types of problems to be considered:

First: Valve is stuck - that is the diaphragm assembly is not free to move through a full stroke either from open to close or vice versa.

Second: Valve is free to move and can't close because of a worn out diaphragm.

Third: Valve leaks even though it is free to move, and the diaphragm isn't leaking.

SERVICE SUGGESTIONS

SYMPTOM	PROBABLE CAUSE	REMEDY
Fails to close	Lack of cover chamber pressure	Check upstream pressure, X46 or tubing for obstruction.
	Diaphragm damaged. (See Diaphragm Check, Steps 1-3)	Replace diaphragm
	Corrosion or excessive scale build up on valve stem. (See Freedom of Movement Check, Step 4.)	Clean and polish stem Inspect and replace any damaged or badly eroded part.
	Mechanical obstruction. Object lodged in valve. (See Freedom of Movement Check, Step 4.)	Remove obstruction.
Fails to open	Worn Disc (See Tight Seating Check, Step 4.)	Replace disc.
	Closed upstream and/or downstream isolation valves in main line.	Open Valves
	Insufficient line pressure.	Check pressure.
	Corrosion or excessive scale build up on valve stem. (See Freedom of Movement Check Step 4)	Clean and polish stem Inspect and replace damaged or badly eroded part.

Diaphragm Check (#1)

1. Shut off pressure to the 90-21 valve by slowly closing upstream and downstream isolation valves.

there are no isolation valves, It will be necessary to deactivate the system.

2. Disconnect or close all pilot control lines to the valve cover and leave only one fitting in highest point of cover open to atmosphere.

3. With the cover vented to atmosphere, slowly open upstream isolation valve.

CAUTION: The valve cannot be serviced under pressure. Where

assembly is tight. If the fluid appears to flow continuously from the isolation valve to allow some pressure into the valve body. Observe the open cover tapping for signs of continuous flow. It is not necessary to fully open isolating valve. Volume in cover chamber capacity chart will

Freedom of Movement Check (#2)

4. Determining the Valve's freedom of movement can be done after all pressure is removed from the valve.

for the valve, check that the cover chamber and the body are tem-

hole in top of valve stem, and lift the diaphragm assembly manu-

After closing inlet and outlet isolation valves and bleeding pressure from the valve, the cover can be removed. (See chart in section 5. Disassembly.)

Temporarily vented to atmosphere. Insert fabricated tool into threaded hole in top of valve stem and lift the diaphragm assembly. The tool is fabricated from a 1/2" thick plate on one end to fit valve stem and has a 1/2" thick handle of some kind on the other

STEM TRAVEL			
Valve Size (inches)	Travel (inches)	Inches	MM
1 1/4	32	0.4	10
1 1/2	40	0.4	10
2	50	0.6	15
2 1/2	65	0.7	18
3	80	0.8	20
4	100	1.1	28
6	150	1.7	43
8	200	2.3	58
10	250	2.8	71
12	300	3.4	86

Preventative Maintenance

minimum of maintenance. However, a periodic inspection schedule should be established to determine how the operating condi-

tion of the system are effecting the valve. The effect of these

Disassembly

Inspection or maintenance can be accomplished without removing the valve from the line.

1. Close upstream and downstream isolation valves to shut off all pressure to the valve.

WARNING: Maintenance personnel can be injured and equip-

ment damaged if disassembly is attempted with pressure in the

system. 2. Loosen tube fittings to remove pressure from the valve body and cover chamber. After pressure had been released from the

the valve cover and investigate the leakage. (See "Maintenance" Section for procedure.)

COVER CHAMBER CAPACITY

(Liquid Volume displaced when valve opens)

this is a good reason to believe the diaphragm is either damaged or it is loose on the stem. In either case, this is sufficient cause to remove

Valve Size (inches)	Displacement	
	Gallons	Liters
1 1/4	.02	.07
1 1/2	.02	.07
2	.03	.12
2 1/2	.04	.16
3	.08	.30
4	.17	.64
6	.53	2.0
8	1.26	4.8
10	2.51	9.5
12	4.00	15.1

is closed and when manually positioned open. The distance be-

in the chart.

Place mark on the diaphragm assembly fitting to locate the valve

When the valve is closed, the distance between the two marks should be approximately the stem travel shown

Freedom of Movement Check (#2)

there is a good reason to believe something is mechanically restricting the stroke of the valve.

5. Test for seat leakage by applying inlet pressure to the cover moved. The stem should also be checked for scale build-up. (See

permitting pressure to creep back, or the Hytrol valve is allowing of the valve, wait until it closes, and then close the isolation valve downstream of the Hytrol valve. Install a pressure gauge between the two closed valves. Watch the pressure gauge. If the pressure begins to climb, then either the isolation valve is


ing pressure to go through it. Usually the pressure at the Hytrol valve will be the isolation valve leakage. If the pressure goes up to the inlet pressure, you can be sure the Hytrol valve is leaking. If it goes up to the pressure on the isolation valve discharge, the Hytrol valve is holding tight,

reassembling pilot system.

3. Remove cover nuts and remove cover. If the valve has been sketch position of tubing and controls for reassembly. The schematic on the E-90-21 sheet can be used as a guide when

with a dull cold chisel.

in service for any length of time, chances are the cover will have to be loosened by driving upward along the edge of the cover

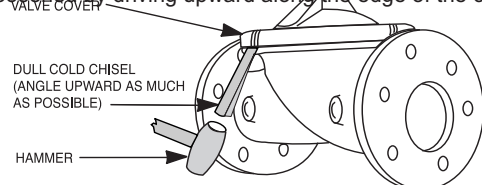

100-01 UL

When block and tackle or a power hoist is to be used to lift valve cover, insert proper size eye bolt in place of the center cover plug. On 8", 10" and 12" valves only, there are 4 holds where jacking screws maybe inserted to break cover loose from the body and then 4 eye bolts may be inserted for lifting purposes. **Pull cover straight up** to keep from damaging the integral seat bearing and stem.

COVER CENTER PLUG SIZE

Valve Size	Thread Size (NPT)
1 1/4" - 1 1/2"	1/4"
2" - 3"	1/2"
4" - 6"	3/4"
8" - 10"	1"
12"	1 1/4"

4. Remove the diaphragm and disc assembly from the valve body. With smaller valves this can be accomplished by hand, **pulling straight up on the stem so as not to damage the seat bearing**. On large valves, an eye bolt of proper size can be installed in the stem and the diaphragm assembly can be then lifted with a block and tackle or power hoist. Take care not to damage the stem or bearings. The valve won't work if these are damaged.

VALVE STEM THREAD SIZE

Valve Size	Thread Size (UNF Internal)
1 1/4" - 2 1/2"	10 - 32
3" - 4"	1/4 - 28
6" - 12"	3/8 - 24

5. The next item to remove is the stem nut. Examine the stem threads above the nut for signs of mineral deposits or corrosion. If the threads are not clean, use a wire brush to remove as much of the residue as possible. Attach a good fitting wrench to the nut and give it a sharp "rap" rather than a steady pull. Usually several blows are sufficient to loosen the nut for further removal. On the smaller valves, the entire diaphragm assembly can be held by the stem in a vise **equipped with soft brass jaws** before removing the stem nut.

The use of a pipe wrench or a vise without soft brass jaws scars the fine finish on the stem. No amount of careful dressing can restore the stem to its original condition. Damage to the finish of the stem can cause the stem to bind in the bearings and the valve will not open or close.

6. After the stem nut has been removed, the diaphragm assembly breaks down into its component parts. Removal of the disc from the disc retainer can be a problem if the valve has been in service for a long time. Using two screwdrivers inserted along the outside edge of the disc usually will accomplish its removal. Care should be taken to preserve the spacer washers in water, particularly if no new ones are available for re-assembly.

Reassembly

1. Reassembly is the reverse of the disassembly procedure. If a new disc has been installed, it may require a different number of spacer washers to obtain the right amount of "grip" on the disc. When the diaphragm assembly has been tightened to a point where the diaphragm cannot be twisted, the disc should be compressed very slightly by the disc guide. Excessive compression should be avoided. Use just enough spacer washers to hold it firmly.


2. Make sure the stem nut is made up very tight. Attach a good fitting wrench to the nut and give it a sharp "rap" rather than a steady pull. Usually several blows are sufficient to tighten the nut for final tightening. Failure to do so could allow the diaphragm to pull loose and tear when subjected to pressure.

3. Carefully install the diaphragm assembly by lowering the stem through the seat bearing. Take care not to damage the stem or bearing. Line up the diaphragm holes with the stud or bolt holes on the body. On larger valves with studs, it may be necessary

7. The only part left in the valve body is the seat which ordinarily does not require removal. Careful cleaning and polishing of inside and outside surfaces with 400 wet/dry sandpaper will usually restore the seat's sharp edge. If, however, it is badly worn and replacement is necessary, it can be easily removed.

Seats in valve sizes 1 1/4" through 6" are threaded into the valve body. They can be removed with accessory X109 Seat Removing Tool available from the factory. On 8" and larger valves, the seat is held in place by socket head screws. If upon removal of the screws the seat cannot be lifted out, it will be necessary to use a piece of angle or channel iron with a hole drilled in the center. Place it across the body so a long stud can be inserted through the center hole in the seat and the hole in the angle iron. By tightening the nut a uniform upward force is exerted on the seat for removal.

NOTE: Do not lift up on the end of the angle iron as this may force the integral bearing out of alignment, causing the stem to bind.

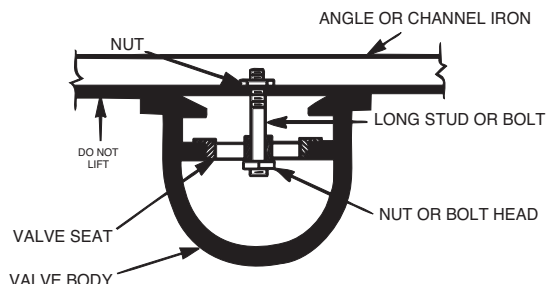

Lime Deposits

One of the easiest ways to remove lime deposits from the valve stem is to dip it in a 5-percent muriatic acid solution just long enough for the deposit to dissolve. This will remove most of the common types of deposits. **CAUTION: USE EXTREME CARE WHEN HANDLING ACID, RINSE PARTS IN WATER BEFORE HANDLING.** If the deposit is not removed by acid, the a fine grit (400) wet or dry paper can be used with water.

Inspection of Parts

After the valve has been disassembled, each part should be examined carefully for signs of wear, corrosion, or any other abnormal conditions. Usually, it is a good idea to replace the rubber parts (diaphragm and disc) unless they are free of signs of wear. Any other parts which appear doubtful should be replaced.

to hold the diaphragm assembly up while stretching the diaphragm over the studs.

4. Put spring in place and replace cover. Make sure diaphragm is laying smooth under cover.

5. Tighten cover nuts firmly using a cross-over pattern until all nuts are tight.


Test Procedure After Valve Assembly

1. Check the diaphragm assembly for freedom of movement by inserting a rod into the threaded hole in the top of the valve stem and lifting the diaphragm assembly manually. The diaphragm assembly should move freely without any signs of sticking or grabbing. (See "Freedom of Movement Check" section).


2. Re-install the pilot system and tubing exactly as it was prior to removal.

3. Follow steps under "Start-Up and Adjustment" Section in N-90-21 UL Sheet.

100-01 UL

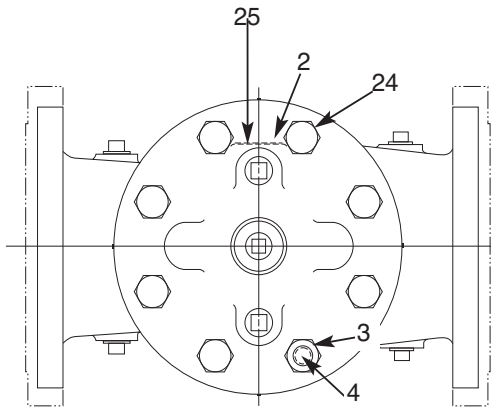


TOP VIEW

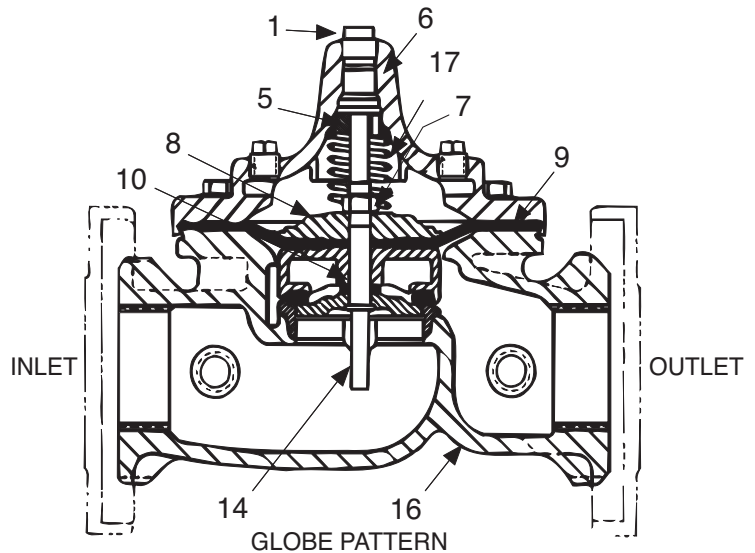


GLOBE PATTERN

PARTS LIST


Item	Description
1.	Pipe Plug
2.	Drive Screws (for nameplate)
3.	Hex Nut (8" and larger)
4.	Stud (8" and larger)
5.	Cover Bearing
6.	Cover
7.	Stem Nut
8.	Diaphragm Washer
9.	Diaphragm
10.	Spacer Washers
11.	Disc Guide
12.	Disc Retainer
13.	Disc
14.	Stem
15.	Seat
16.	Body
17.	Spring
22.	Socket Head Screws (8" and larger)
23.	Seat O-Ring
24.	Hex Head Bolt (1 1/4" thru 6")
25.	Nameplate
26.	Upper Spring Washer (Epoxy coated valves only)
27.	Lower Spring Washer (Epoxy coated valves only)
28.	Cover Bearing Housing (16" only)
29.	Cover O-Ring (16" only)
30.	Hex Bolt (16" only)
31.	Pipe Cap (16" only)

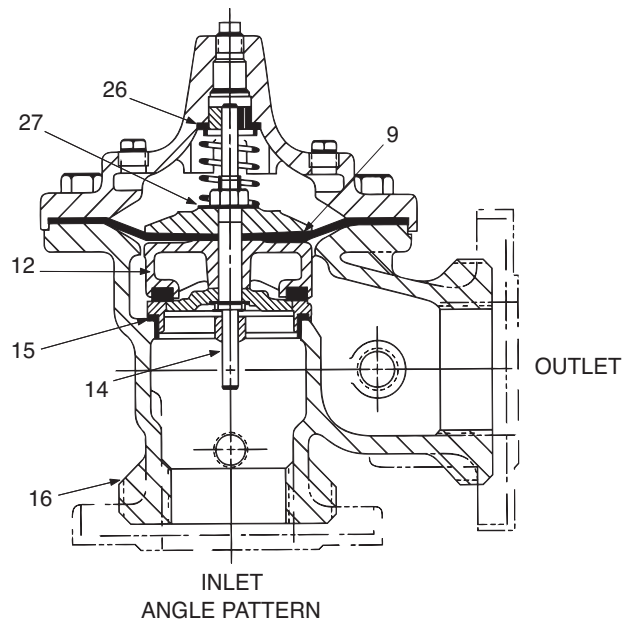

INLET
ANGLE PATTERN

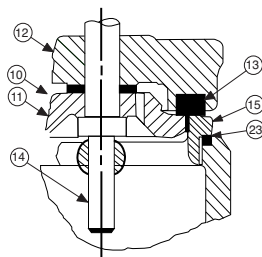

1 1/4" - 6" SEAT DETAIL

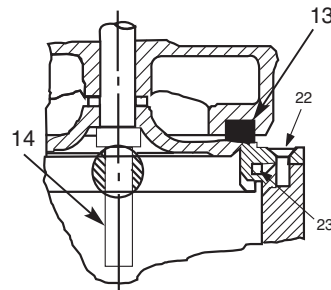

8" - 24" SEAT DETAIL

When ordering please specify: All nameplate data, Description, Item number




—MODEL— **90-21/690-21 UL**
Performance Characteristics of UL listed
90-21 Pressure Reducing Valves

VALVE SIZE	TEST DESCRIPTION	UL TEST RESULTS
1-1/2" GLOBE	DEAD-END SHUT-OFF CHARACTERISTICS; RECORD OUTLET PRESSURE AT ZERO FLOW WHEN FLOW STARTS AT 80 GPM & IS REDUCED UNTIL FLOW IS ZERO	WITH OUTLET PRESSURE CONTROL SETPOINT AT 30 PSI & INLET PRESSURES FROM 75 TO 300 PSI, THE RECORDED OUTLET PRESSURE AT ZERO FLOW RANGED BETWEEN 40 TO 45 PSI WITH OUTLET PRESSURE CONTROL SETPOINT AT 165 PSI & INLET PRESSURE AT 300 PSI, THE RECORDED OUTLET PRESSURE AT ZERO FLOW WAS 175 PSI
1-1/2" GLOBE	DEAD-END SHUT-OFF CHARACTERISTICS; RECORD OUTLET PRESSURE AT ZERO FLOW WHEN FLOW STARTS AT 80 GPM & IS REDUCED UNTIL FLOW IS ZERO	WITH OUTLET PRESSURE CONTROL SETPOINT AT 30 PSI & INLET PRESSURES FROM 75 TO 300 PSI, THE RECORDED OUTLET PRESSURE AT ZERO FLOW RANGED BETWEEN 38 TO 41 PSI WITH OUTLET PRESSURE CONTROL SETPOINT AT 165 PSI & INLET PRESSURE AT 300 PSI, THE RECORDED OUTLET PRESSURE AT ZERO FLOW WAS 175 PSI
2" GLOBE	DEAD-END SHUT-OFF CHARACTERISTICS RECORD OUTLET PRESSURE AT ZERO FLOW WHEN FLOW STARTS AT 125GPM & IS REDUCED UNTIL FLOW IS ZERO	WITH OUTLET PRESSURE CONTROL SETPOINT AT 30 PSI & INLET PRESSURES FROM 75 TO 300 PSI, THE RECORDED OUTLET PRESSURE AT ZERO FLOW RANGED BETWEEN 40 TO 45 PSI WITH OUTLET PRESSURE CONTROL SETPOINT AT 165 PSI & INLET PRESSURE AT 300 PSI, THE RECORDED OUTLET PRESSURE AT ZERO FLOW WAS 175 PSI
3" GLOBE	DEAD-END SHUT-OFF CHARACTERISTICS RECORD OUTLET PRESSURE AT ZERO FLOW WHEN FLOW STARTS AT 275 GPM & IS REDUCED UNTIL FLOW IS ZERO	WITH OUTLET PRESSURE CONTROL SETPOINT AT 30 PSI & INLET PRESSURES FROM 75 TO 300 PSI, THE RECORDED OUTLET PRESSURE AT ZERO FLOW RANGED BETWEEN 35 TO 38 PSI WITH OUTLET PRESSURE CONTROL SETPOINT AT 165 PSI & INLET PRESSURE AT 300 PSI, THE RECORDED OUTLET PRESSURE AT ZERO FLOW WAS 175 PSI
4" GLOBE	DEAD-END SHUT-OFF CHARACTERISTICS; RECORD OUTLET PRESSURE AT ZERO FLOW WHEN FLOW STARTS AT 500 GPM & IS REDUCED UNTIL FLOW IS ZERO	WITH OUTLET PRESSURE CONTROL SETPOINT AT 30 PSI & INLET PRESSURES FROM 75 TO 300 PSI, THE RECORDED OUTLET PRESSURE AT ZERO FLOW RANGED BETWEEN 37 TO 42 PSI WITH OUTLET PRESSURE CONTROL SETPOINT AT 165 PSI & INLET PRESSURE AT 300 PSI, THE RECORDED OUTLET PRESSURE AT ZERO FLOW WAS 172 PSI
6" GLOBE	DEAD-END SHUT-OFF CHARACTERISTICS; RECORD OUTLET PRESSURE AT ZERO FLOW WHEN FLOW STARTS AT 700 GPM & IS REDUCED UNTIL FLOW IS ZERO	WITH OUTLET PRESSURE CONTROL SETPOINT AT 30 PSI & INLET PRESSURES FROM 75 TO 300 PSI, THE RECORDED OUTLET PRESSURE AT ZERO FLOW RANGED BETWEEN 35 TO 40 PSI WITH OUTLET PRESSURE CONTROL SETPOINT AT 165 PSI & INLET PRESSURE AT 300 PSI, THE RECORDED OUTLET PRESSURE AT ZERO FLOW WAS 170 PSI
8" GLOBE	DEAD-END SHUT-OFF CHARACTERISTICS; RECORD OUTLET PRESSURE AT ZERO FLOW WHEN FLOW STARTS AT 700 GPM & IS REDUCED UNTIL FLOW IS ZERO	WITH OUTLET PRESSURE CONTROL SETPOINT AT 29 PSI & INLET PRESSURES FROM 75 TO 300 PSI, THE RECORDED OUTLET PRESSURE IS EQUAL TO AN ACCEPTABLE PLUS OR MINUS 10% WITH OUTLET PRESSURE CONTROL SETPOINT AT 165 PSI & INLET PRESSURE AT 300 PSI, THE RECORDED OUTLET PRESSURE AT ZERO FLOW IS EQUAL TO AN ACCEPTABLE PLUS OR MINUS 15 PSI OF SETPOINT.
10" & 12" GLOBE	DEAD-END SHUT-OFF CHARACTERISTICS; RECORD OUTLET PRESSURE AT ZERO FLOW WHEN FLOW STARTS AT 800 GPM & IS REDUCED UNTIL FLOW IS ZERO.	WITH OUTLET PRESSURE CONTROL SETPOINT FROM 30 PSI TO 175 PSI & INLET PRESSURES FROM 75 TO 300 PSI, THE RECORDED OUTLET PRESSURE IS EQUAL TO AN ACCEPTABLE PLUS OR MINUS 10% OF SETPOINT. WITH OUTLET PRESSURE CONTROL SETPOINT AT 175 PSI & INLET PRESSURE AT 300 PSI THE RECORDED OUTLET AT ZERO FLOW IS EQUAL TO AN ACCEPTABLE PLUS OR MINUS 15 PSI OF SETPOINT.


1-1/2" 90G-21

OBSERVED FLOW RATE WHEN INLET PRESSURE
DROPS BELOW OUTLET PRESSURE SET POINT

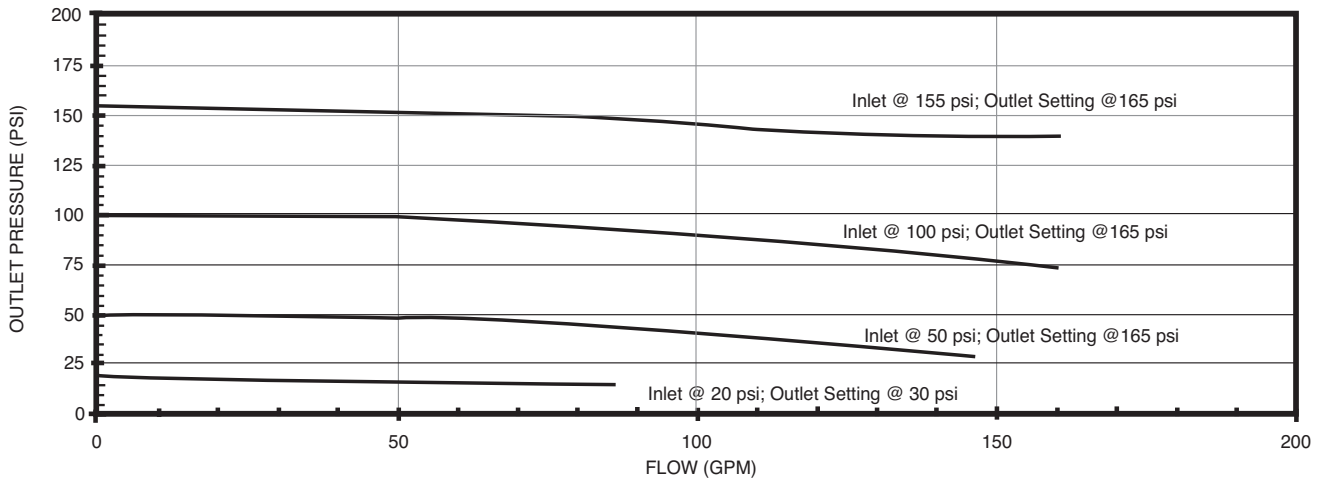


1-1/2" 90A-21

OBSERVED FLOW RATE WHEN INLET PRESSURE
DROPS BELOW OUTLET PRESSURE SET POINT

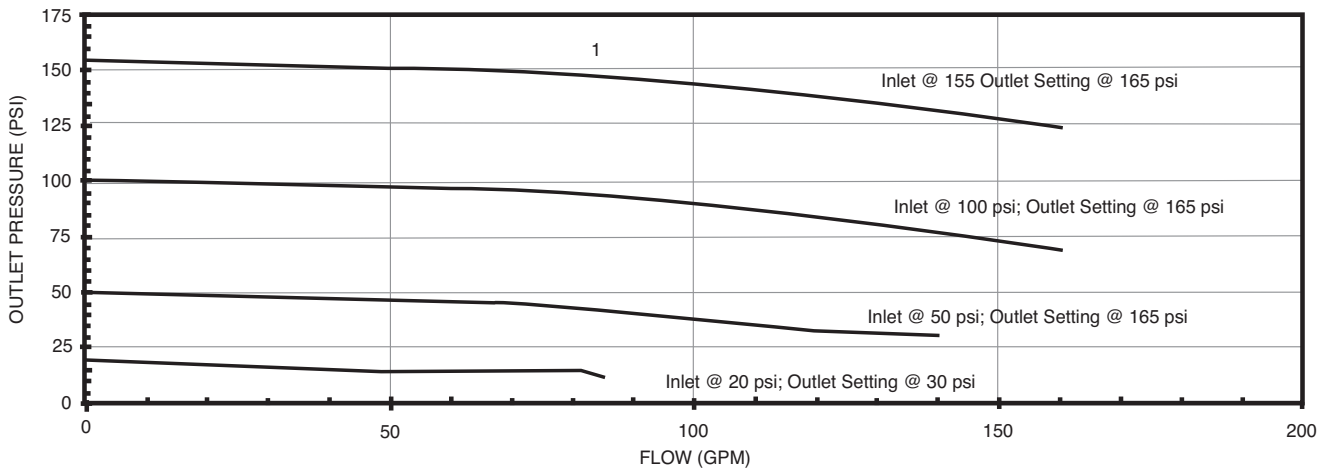


2" 90G-21

OBSERVED FLOW RATE WHEN INLET PRESSURE
DROPS BELOW OUTLET PRESSURE SET POINT

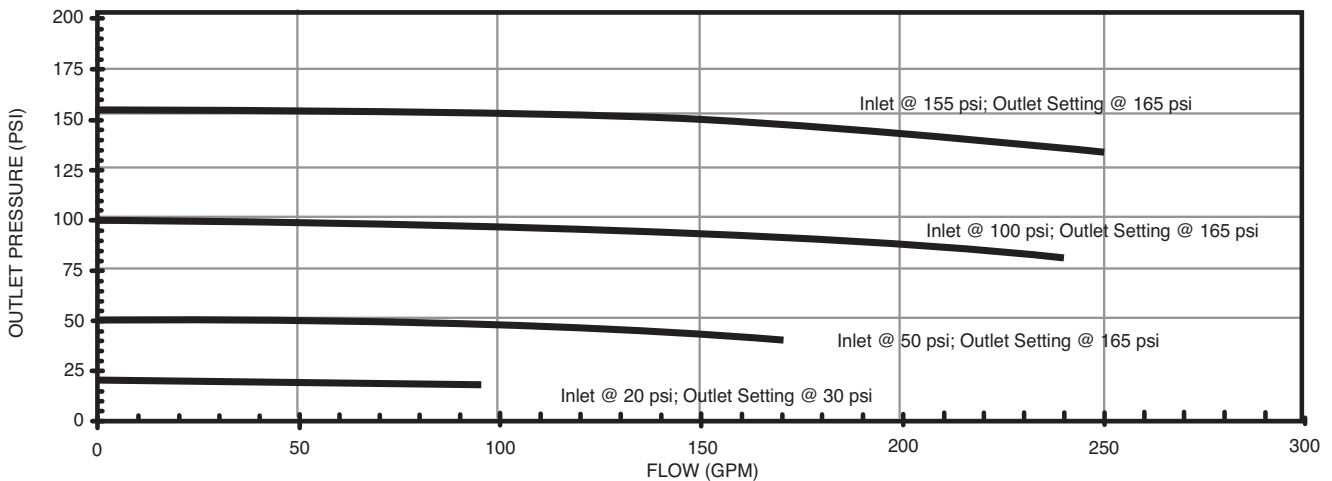


3" 90G-21

OBSERVED FLOW RATE WHEN INLET PRESSURE
DROPS BELOW OUTLET PRESSURE SET POINT

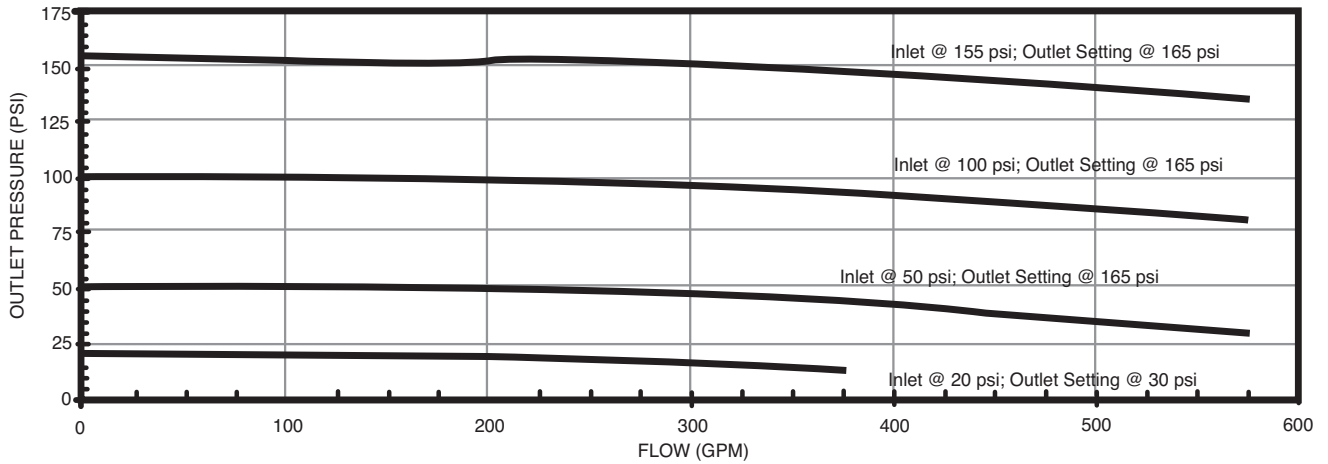


4" 90G-21

OBSERVED FLOW RATE WHEN INLET PRESSURE
DROPS BELOW OUTLET PRESSURE SET POINT

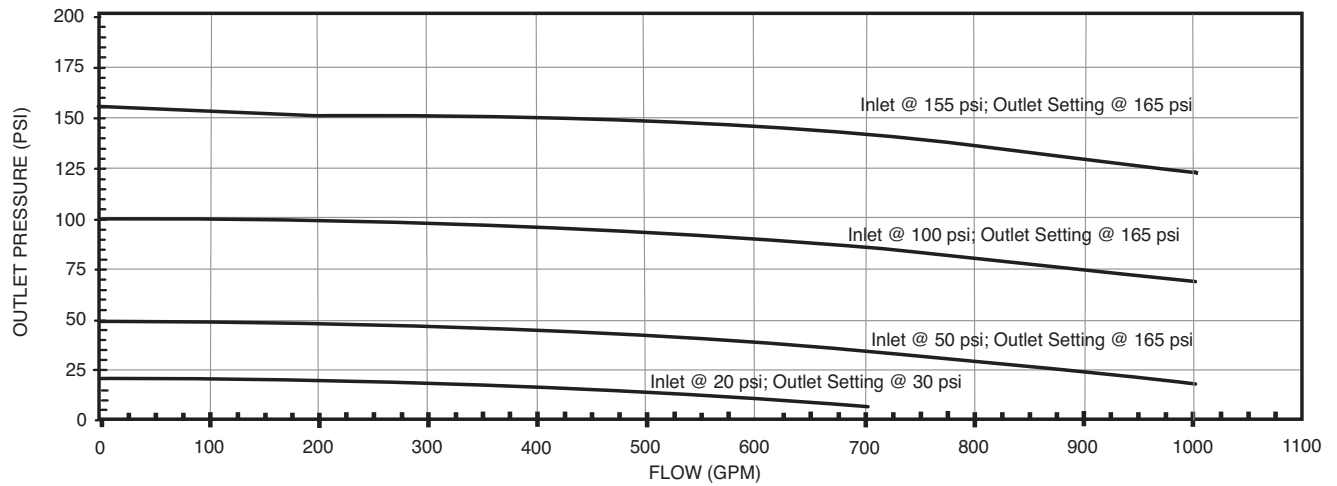


6" 90G-21

OBSERVED FLOW RATE WHEN INLET PRESSURE
DROPS BELOW OUTLET PRESSURE SET POINT

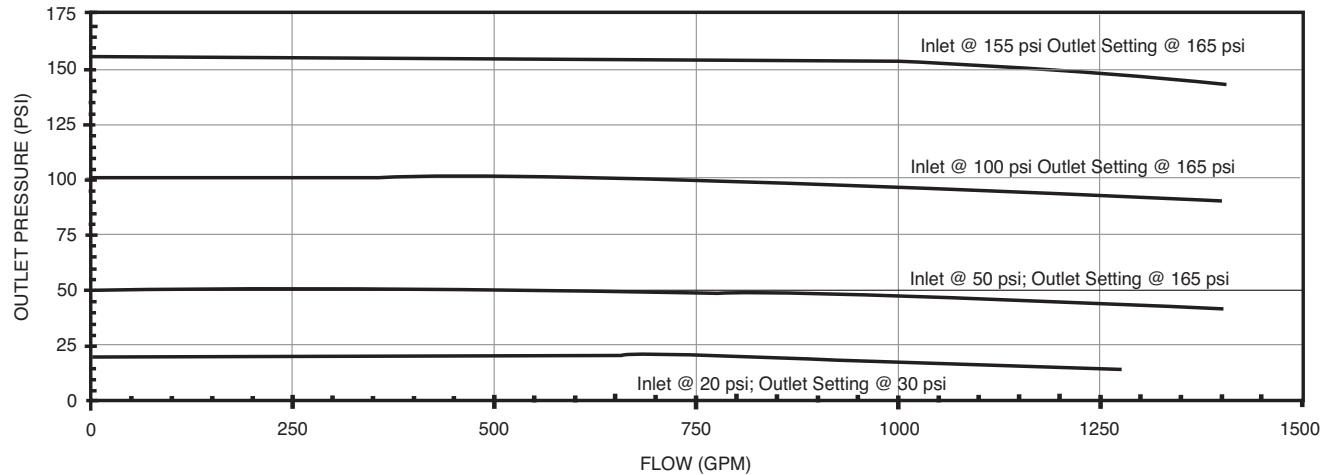


8" 90G-21

OBSERVED FLOW RATE WHEN INLET PRESSURE
DROPS BELOW OUTLET PRESSURE SET POINT

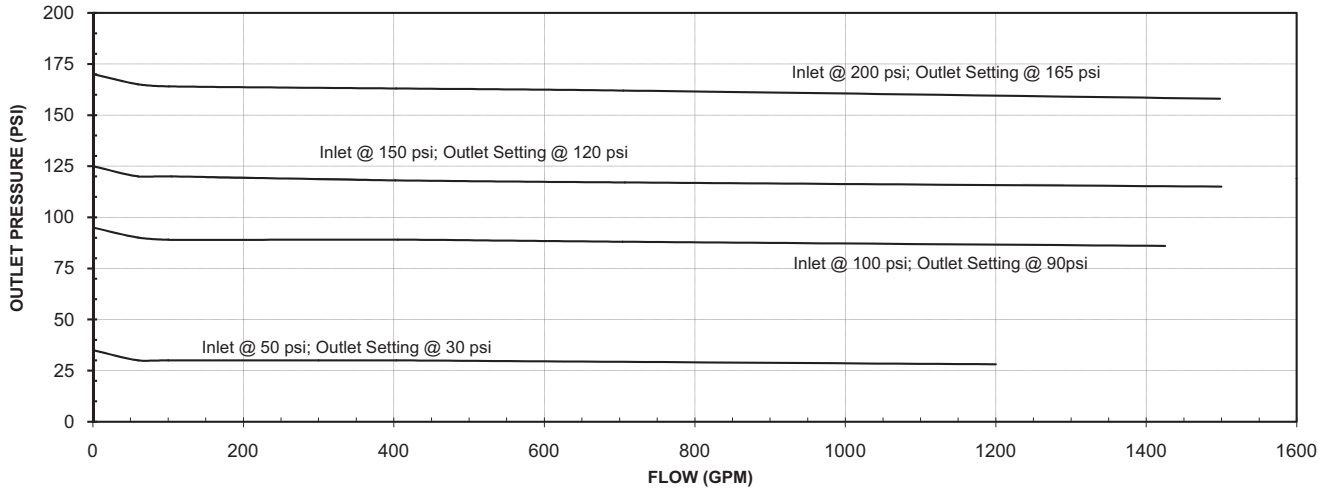


10" 90G-21

OBSERVED FLOW RATE WHEN INLET PRESSURE
DROPS BELOW OUTLET PRESSURE SET POINT

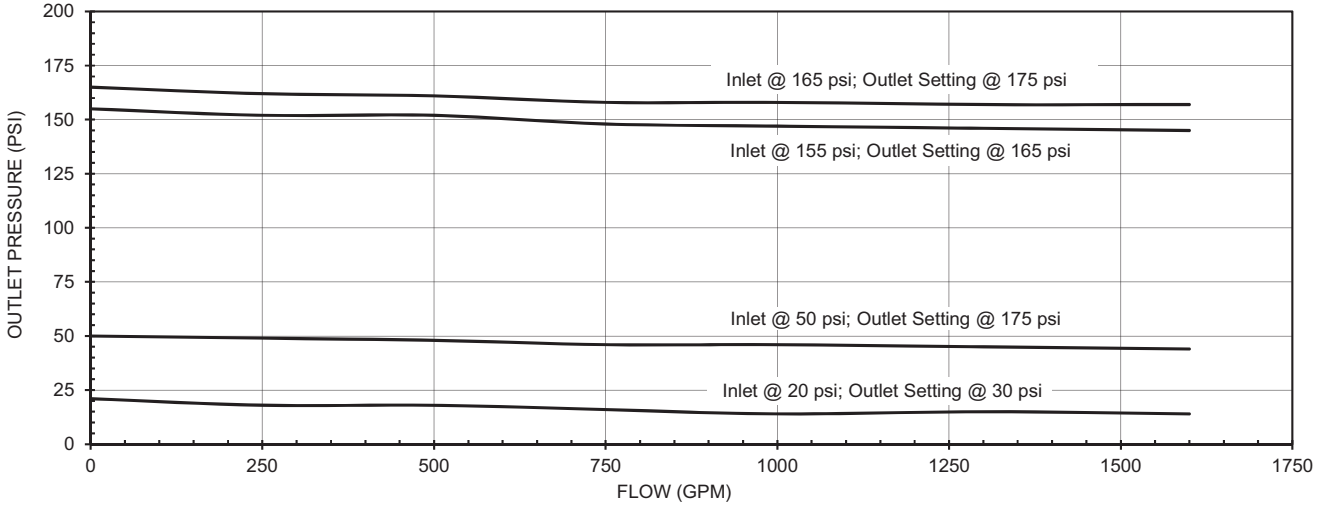

12" 90G-21

OBSERVED FLOW RATE WHEN INLET PRESSURE
DROPS BELOW OUTLET PRESSURE SET POINT

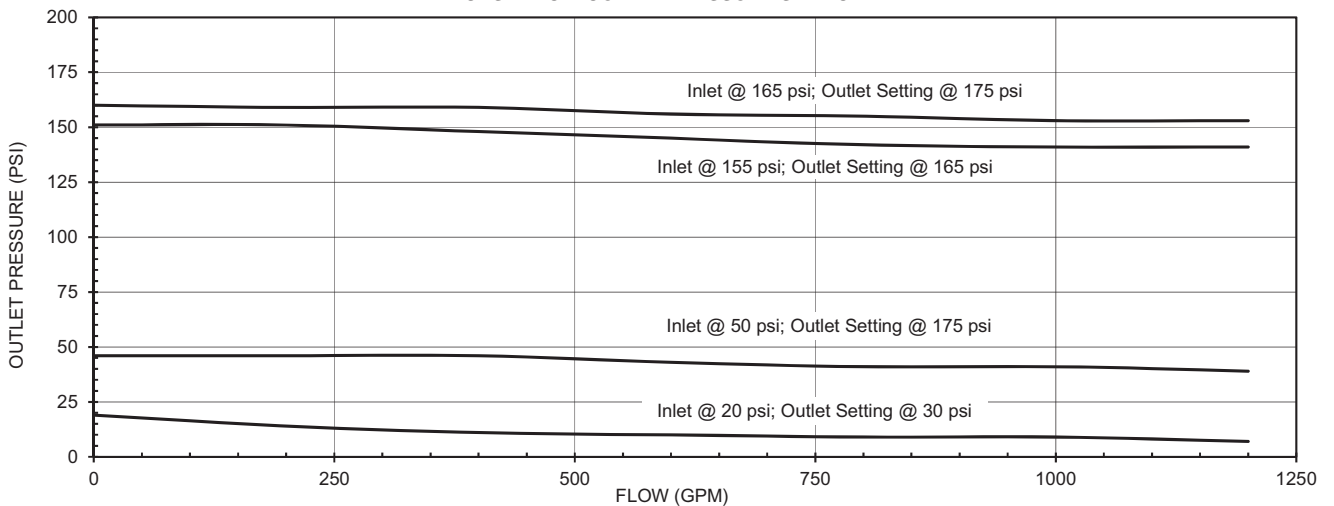



—MODEL— **CRD**

Pressure Reducing Control



DESCRIPTION

The Cla-Val Model CRD Pressure Reducing Control automatically reduces a higher inlet pressure to a lower outlet pressure. It is a direct acting, spring loaded, diaphragm type control that operates hydraulically or pneumatically. It may be used as a self-contained valve or as a pilot control for a Cla-Val main valve. It will hold a constant downstream pressure within very close pressure limits.

OPERATION

The CRD Pressure Reducing Control is normally held open by the force of the compression spring above the diaphragm; and delivery pressure acts on the underside of the diaphragm. Flow through the valve responds to changes in downstream demand to maintain a pressure.

INSTALLATION

The CRD Pressure Reducing Control may be installed in any position. There is one inlet port and two outlets, for either straight or angle installation. The second outlet port can be used for a gage connection. A flow arrow is marked on the body casting.

ADJUSTMENT PROCEDURE

The CRD Pressure Reducing Control can be adjusted to provide a delivery pressure range as specified on the nameplate. Pressure adjustment is made by turning the adjustment screw to vary the spring pressure on the diaphragm. The greater the compression on the spring the higher the pressure setting.

1. Turn the adjustment screw in (clockwise) to increase delivery pressure.
2. Turn the adjustment screw out (counter-clockwise) to decrease the delivery pressure.
3. When pressure adjustment is completed tighten jam nut on adjusting screw and replace protective cap.
4. When this control is used, as a pilot control on a Cla-Val main valve, the adjustment should be made under flowing conditions. The flow rate is not critical, but generally should be somewhat lower than normal in order to provide an inlet pressure several psi higher than the desired setting

The approximate minimum flow rates given in the table are for the main valve on which the CRD is installed.

Valve Size	1 1/4" -3"	4"-8"	10"-16"
Minimum Flow GPM	1-2	4-15	35-95

SYMPTOM	PROBABLE CAUSE	REMEDY
Fails to open when delivery pressure lowers	No spring compression	Tighten adjusting screw
	Damaged spring	Disassemble and replace
	Spring guide (8) is not in place	Assemble properly
	Yoke dragging on inlet nozzle	Disassemble and reassemble properly (refer to Reassembly)
Fails to close when delivery pressure rises	Spring compressed solid	Back off adjusting screw
	Mechanical obstruction	Disassemble and reassemble properly (refer to Reassembly)
	Worn disc	Disassemble remove and replace disc retainer assembly
	Yoke dragging on inlet nozzle	Disassemble and reassemble properly (refer to Reassembly)
Leakage from cover vent hole	Damaged diaphragm	Disassemble and replace
	Loose diaphragm nut	Remove cover and tighten nut

MAINTENANCE

Disassembly

To disassemble follow the sequence of the item numbers assigned to parts in the sectional illustration.

Reassembly

Reassembly is the reverse of disassembly. Caution must be taken to avoid having the yoke (17) drag on the inlet nozzle of the body (18). Follow this procedure:

1. Place yoke (17) in body and screw the disc retainer assembly (16) until it bottoms.
2. Install gasket (14) and spring (19) for 2-30 and 2-6.5 psi range onto plug (13) and fasten into body. Disc retainer must enter guide hole in plug as it is assembled. Screw the plug in by hand. Use wrench to tighten only.
3. Place diaphragm (12) diaphragm washer (11) and Belleville washer (20) on yoke. Screw on hex nut (10).
4. Hold the diaphragm so that the screw holes in the diaphragm and body align. Tighten diaphragm nut with a wrench. At the final tightening release the diaphragm and permit it to rotate 5° to 10°. The diaphragm holes should now be properly aligned with the body holes.

To check for proper alignment proceed as follows:

Rotate diaphragm clockwise and counterclockwise as far as possible. Diaphragm screw holes should rotate equal distance on either side of body screw holes $\pm 1/8"$.

Repeat assembly procedure until diaphragm and yoke are properly aligned. There must be no contact between yoke and body nozzle during its normal movement. To simulate this movement hold body and diaphragm holes aligned. Move yoke to open and closed positions. There must be no evidence of contact or dragging.




5. Install spring (9) with spring guide (8).
6. Install cover (5), adjusting screw (2) and nut (3), then cap (1).



CRD

Pressure Reducing Control

(Bronze Body with 303SS Trim)

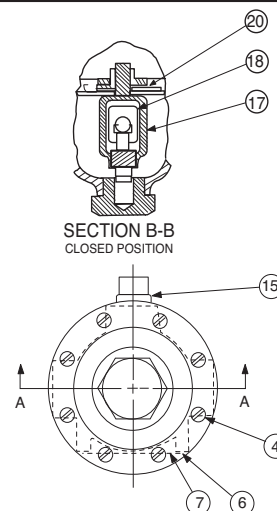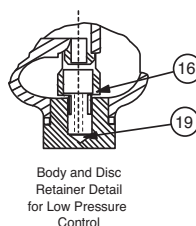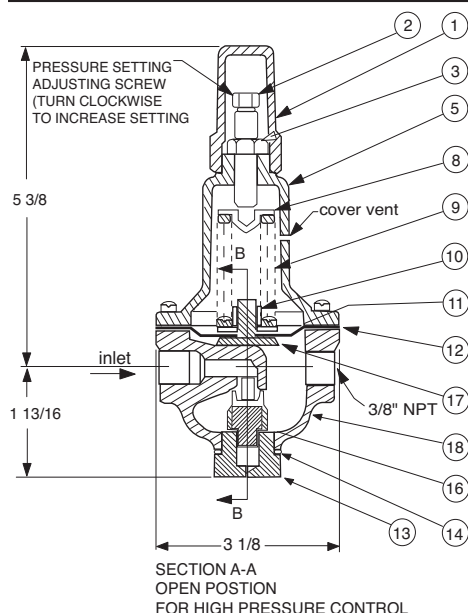

Item	Description	Material	Part Number
1	Cap	PL	67628J
2	Adjusting Screw	BRS	7188201D
3	Jam Nut (3/8-16)	SS	6780106J
4*	Machine Screw (Fil.Hd.) 8 Req'd	303	6757821B
5	Cover	BRS	C2544K
6	Nameplate Screw	SS	67999D
7	Nameplate	BRS	C0022001G
8	Spring Guide	302	71881H
	Spring Guide (20 - 105 psi)	303	205620F
9	Spring (15-75 psi)	CHR/VAN	71884B
	Spring (2 - 6.5 psi)	SS	82575C
	Spring (2 - 30 psi)	SS	81594E
	Spring (20 - 105 psi)	316	20632101E
	Spring (30 - 300 psi)	CHR/VAN	71885J
10	Hex Nut	303	71883D
11	Diaphragm Washer	302	71891G
12*	Diaphragm	NBR	C6936D
13	Plug, Body	BRS	V5653A
14*	Gasket	Fiber	40174F
15	Plug	BRS	6766003F
16*	Disc Retainer Assy. (2 - 30 psi)	SS/Rub	C8348K
	Disc Retainer Assy. (15 - 75 psi)	SS/Rub	37133G
	Disc Retainer Assy. (20 - 105 psi)	SS/Rub	37133G
	Disc Retainer Assy. (30 - 300 psi)	SS/Rub	37133G
17	Yoke	VBZ	V6951H
18	Body & 1/4" Seat Assy	BR/SS	8339702G
19*	Bucking Spring (2 - 6.5 psi)(2 - 30psi)	302	V0558G
20	Belleville Washer	STL	7055007E
*	Repair Kit (No Bucking Spring)	Buna®-N	9170003K
*	Repair Kit (with Bucking Spring)	Buna®-N	9170002B

*SUGGESTED REPAIR PARTS

Size (inch)	Stock Number	Adjustment Range	
		psi	Ft of Water
3/8	7194307A	2 - 6.5	4.5 - 15
3/8	7194308J	2 - 30	4.5 - 69
3/8	7194303K	15 - 75	35 - 173
3/8	7194311C	20 - 105	46 - 242
3/8	7194304H	30 - 300	69 - 692
Factory Set Pressure		PSI per Turn*	
	2 - 6.5 set @ 3.5 psi	.61	
	2 - 30 set @ 10 psi	3.0	
	15 - 75 set @ 20 psi	9.0	
	20 - 105 set @ 60 psi	12.0	
	30 - 300 set @ 60 psi	27.0	

*Approximate-Final Adjustment should be with a pressure gauge and with flow.

When ordering parts specify:

- All nameplate data
- Item Description
- Item number



— MODEL — **X46**

Flow Clean Strainer



X46A Straight




X46B Angle

- Self Scrubbing Cleaning Action
- Straight Type or Angle Type

The Cla-Val Model X46 Strainer is designed to prevent passage of foreign particles larger than .015". It is especially effective against such contaminant as algae, mud, scale, wood pulp, moss, and root fibers. There is a model for every Cla-Val. valve.

The X46 Flow Clean strainer operates on a velocity principle utilizing the circular "air foil" section to make it self cleaning. Impingement of particles is on the "leading edge" only. The low pressure area on the downstream side of the screen prevents foreign particles from clogging the screen. There is also a scouring action, due to eddy currents, which keeps most of the screen area clean.

Dimensions (In Inches)

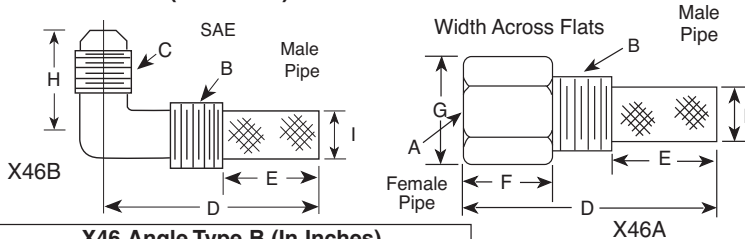

X46 Angle Type B (In Inches)

B(NPT)	C(SAE)	D	E	H	I
1/8	1/4	1-3/8	5/8	7/8	1/4
1/4	1/4	1-3/4	3/4	1	3/8
3/8	1/4	2	7/8	1	1/2
3/8	3/8	1-7/8	7/8	1	1/2
1/2	3/8	2-3/8	1	1-1/4	5/8

**When Ordering,
Please Specify:**

- Catalog Number X46
- Straight Type or Angle Type
- Size Inserted Into and Size Connection
- Materials

X46A Straight Type A (In Inches)

A (NPT)	B (NPT)	D	E	F	G	I
1/8	1/8	1-3/4	3/4	1/2	1/2	1/4
1/4	1/4	2-1/4	1	3/4	3/4	3/8
3/8	3/8	2-1/2	1	7/8	7/8	1/2
3/8	1/2	2-1/2	1-1/4	1/2	7/8	3/4
1/2	1/2	3	1-1/4	1	1-1/8	3/4
3/8	3/4	3-3/8	2	1/2	1	7/8
3/4	3/4	4	2	1	1-1/2	7/8
3/8	1	4-1/4	2-3/4	1/2	1-3/8	7/8
1	1	4-1/2	2-3/4	1-1/4	1-3/4	7/8
1/2	1	4-1/4	2-3/4	1/2	1-3/8	7/8

INSTALLATION

The strainer is designed for use in conjunction with a Cla-Val Main Valve, but can be installed in any piping system where there is a moving fluid stream to keep it clean. When it is used with the Cla-Val Valve, it is threaded into the upstream body port provided for it on the side of the valve. It projects through the side of the Main Valve into the flow stream. All liquid shunted to the pilot control system and to the cover chamber of the Main Valve passes through the X46 Flow Clean Strainer.

INSPECTION

Inspect internal and external threads for damage or evidence of cross-threading. Check inner and outer screens for clogging, embedded foreign particles, breaks, cracks, corrosion, fatigue, and other signs of damage.

DISASSEMBLY

Do not attempt to remove the screens from the strainer housing.

CLEANING

After inspection, cleaning of the X46 can begin. Water service usually will produce mineral or lime deposits on metal parts in contact with water. These deposits can be cleaned by dipping X46 in a 5-percent muriatic acid solution just long enough for deposit to dissolve. This will remove most of the common types of deposits.

Caution: use extreme care when handling acid. If the deposit is not removed by acid, then a fine grit (400) wet or dry sandpaper can be used with water. Rinse parts in water before handling. An appropriate solvent can clean parts used in fueling service. Dry with compressed air or a clean, lint-free cloth. Protect from damage and dust until reassembled.

REPLACEMENT

If there is any sign of damage, or if there is the slightest doubt that the Model X46 Flow Clean Strainer may not afford completely satisfactory operation, replace it. Use Inspection steps as a guide. Neither inner screen, outer screen, nor housing is furnished as a replacement part. Replace Model X46 Flow Clean Strainer as a complete unit.


When ordering replacement Flow-Clean Strainers, it is important to determine pipe size of the tapped hole into which the strainer will be inserted (refer to column A or F), and the size of the external connection (refer to column B or G).

Proper Identification

For ordering repair kits, replacement parts, or for inquiries concerning valve operation it is important to properly identify Cla-Val products already in service. Include all nameplate data with your inquiry. Pertinent product data includes valve function, size, material, pressure rating, end details, type of pilot controls used and control adjustment ranges.

Identification Plate

For product identification, cast in body markings are supplemented by the identification plate illustrated on this page. The plate is mounted in the most practical position. **It is extremely important that this identification plate is not painted over, removed, or in any other way rendered illegible.**

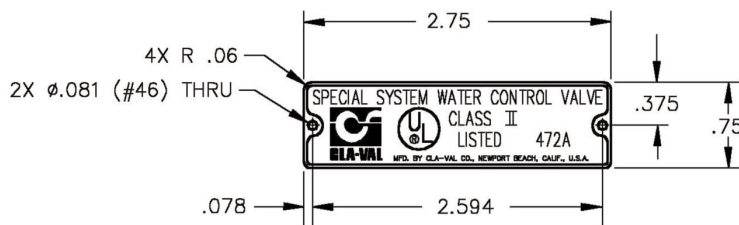

Specify when Ordering

- Model Number
- Adjustment Range (As Applicable)
- Valve Size
- Optional Features
- Pressure Class

How To Order

There are many valves and controls manufactured by Cla-Val that are not listed due to the sheer volume. For information not listed, please contact your local Cla-Val representative.

Unless Otherwise Specified

- X46A Strainer is included.
- CK2 Isolation Valves is included in price on 6" and larger valve sizes.

Limited Warranty

Automatic valves and controls as manufactured by Cla-Val are warranted for one year from date of shipment against manufacturing defects in material and workmanship which develop in the service for which they are designed, provided the products are installed and used in accordance with all applicable instructions and limitations issued by Cla-Val.

We will repair or replace defective material, free of charge, which is returned to our factory, transportation charges prepaid, provided that, after inspection, the material is found to have been defective at time of shipment. This warranty is expressly conditioned on the purchaser's giving Cla-Val immediate written notice upon discovery of the defect.

Components used by Cla-Val but manufactured by others, are warranted only to the extent of that manufacturer's guarantee.

This warranty shall not apply if the product has been altered or repaired by others, and Cla-Val. shall make no allowance or credit for such repairs or alterations unless authorized in writing by Cla-Val.

Terms Of Sale

ACCEPTANCE OF ORDERS

All orders are subject to acceptance by our main office at Newport Beach, California.

CREDIT TERMS

Credit terms are net thirty (30) days from date of invoice.

PURCHASE ORDER FORMS

Orders submitted on customer's own purchase order forms will be accepted only with the express understanding that no statements, clauses, or conditions contained in said order form will be binding on the Seller if they in any way modify the Seller's own terms and conditions of sales.

PRODUCT CHANGES

The right is reserved to make changes in pattern, design or materials when deemed necessary, without prior notice.

PRICES

All prices are F.O.B. Newport Beach, California, unless expressly stated otherwise on our acknowledgement of the order. Prices are subject to change without notice. The prices at which any order is accepted are subject to adjustment to the Seller's price in effect at the time of shipment. Prices do not include sales, excise, municipal, state or any other Government taxes. Minimum order charge \$75.00.

RESPONSIBILITY

We will not be responsible for delays resulting from strikes, accidents, negligence of carriers, or other causes beyond our control. Also, we will not be liable for any unauthorized product alterations or charges accruing there from.

Disclaimer Of Warranties And Limitations Of Liability

The foregoing warranty is exclusive and in lieu of all other warranties and representations, whether expressed, implied, oral or written, including but not limited to any implied warranties or merchantability or fitness for a particular purpose. All such other warranties and representations are hereby cancelled.

Cla-Val shall not be liable for any incidental or consequential loss, damage or expense arising directly or indirectly from the use of the product. Cla-Val shall not be liable for any damages or charges for labor or expense in making repairs or adjustments to the product. Cla-Val shall not be liable for any damages or charges sustained in the adaptation or use of its engineering data and services. No representative of Cla-Val may change any of the foregoing or assume any additional liability or responsibility in connection with the product. The liability of Cla-Val is limited to material replacements F.O.B. Newport Beach, California.

Risk

All goods are shipped at the risk of the purchaser after they have been delivered by us to the carrier. Claims for error, shortages, etc., must be made upon receipt of goods.

EXPORT SHIPMENTS

Export shipments are subject to an additional charge for export packing.

RETURNED GOODS

1. Customers must obtain written approval from Cla-Val prior to returning any material.
2. Cla-Val reserves the right to refuse the return of any products.
3. Products more than six (6) months old cannot be returned for credit.
4. Specially produced, non-standard models cannot be returned for credit.
5. Rubber goods cannot be returned for credit, unless as part of an unopened repair kit which is less than six months old.
6. Goods authorized for return are subject to a 35% (\$75 minimum) restocking charge and a service charge for inspection, reconditioning, replacement of rubber parts, retesting and repackaging as required.
7. Authorized returned goods must be packaged and shipped prepaid to Cla-Val., 1701 Placentia Avenue, Costa Mesa, California 92627-4475.



شرکت آباد گستر تاسیسات ایرانیان

آدرس دفتر مرکزی: ایران - تهران - بزرگراه شهید آیت الله اشرفی اصفهانی - خیابان پیامبر شرقی

خیابان شاهد - خیابان گلستان بیست و ششم - پلاک یک - واحد پنج - کد پستی ۱۴۷۳۶۸۷۷۸۵

تلفن همراه: ۹۸۹۳۹۹۶۰۳۸۰۰

تلفن دفتر مرکزی: ۹۱۰۹۲۰۷۶ - ۹۸۸۲۱

آدرس پست الکترونیکی: info@atapars.com

آدرس سایت: www.atapars.com



CLA-VAL

1701 Placentia Avenue • Costa Mesa, CA 92627

800-942-6326 • Fax: 949-548-5441 • Web Site: cla-val.com • E-mail: info@cla-val.com

CLA-VAL CANADA
4687 Christie Drive
Beamsville, Ontario
Canada L0R 1B4
Phone: 905-563-4963
E-mail: sales@cla-val.ca

CLA-VAL EUROPE
Chemin des Mésanges 1
CH-1032 Romanell/
Lausanne, Switzerland
Phone: 41-21-643-15-55
E-mail: cla-val@cla-val.ch

CLA-VAL UK
Dainton House, Goods Station Road
Tunbridge Wells
Kent TN11 2 DH England
Phone: 44-1892-514-400
E-mail: info@cla-val.co.uk

CLA-VAL FRANCE
Porte du Grand Lyon 1
ZAC du Champ du Pérrier
France - 01700 Neyron
Phone: 33-4-72-25-92-93
E-mail: cla-val@cla-val.fr

CLA-VAL PACIFIC
45 Kennaway Road
Woolston, Christchurch, 8023
New Zealand
Phone: 64-39644860
www.cla-valpacific.com
E-mail: info@cla-valpacific.com



—MODEL— REPAIR KITS

Model 100-01 Hytrol Main Valve

BUNA-N MATERIAL				
	RUBBER KIT	REPAIR KIT	REBUILD ASSEMBLY	STUD & NUT KIT
	STOCK NO.	STOCK NO.	STOCK NO.	STOCK NO.
3/8"	9169801K		21176614B	21176633J
1/2"	9169802H	21176602F	21176615A	21176634H
3/4"	9169802H	21176602F	21176615A	21176634H
1" Non-Guided	9169803F	21176601G	21176616K	21176636F
1"	9169804D	21176603E	21176617J	21176636F
1 1/4"	9169804D	21176603E	21176617J	21176636F
1 1/2"	9169804D	21176603E	21176617J	21176636F
2"	9169805A	21176608K	21176618H	21176637E
2 1/2"	9169811J	21176609J	21176619G	21176638D
3"	9169812G	21176604D	21176620D	21176639C
4"	9169813E	21176605C	21176621C	21176640K
6"	9169815K	21176606B	21176622B	21176641J
8"	9817901D	21176607A	21176623A	21176642H
10"	9817902B	21176610F	21176624K	21176643G
12"	9817903K	21176611E	21176625J	21176644F
14"	9817904H	21176612D	21176626H	21176645E
16"	9817905E	21176613C	21176627G	21176645E

Model 100-20 Hytrol Main Valve

BUNA-N MATERIAL				
	RUBBER KIT	REPAIR KIT	REBUILD ASSEMBLY	STUD & NUT KIT
	STOCK NO.	STOCK NO.	STOCK NO.	STOCK NO.
3"	9169805A	21176608K	21176618H	21176637E
4"	9169812G	21176604D	21176620D	21176639C
6"	9169813E	21176605C	21176621C	21176640K
8"	9169815K	21176606B	21176622B	21176641J
10"	9817901D	21176607A	21176623A	21176642H
12"	9817902B	21176610F	21176624K	21176643G
14"	9817903K	21176611E	21176625J	21176644F
16"	9817903K	21176611E	21176625J	21176644F

Consult factory for larger sizes

Rubber Kit Includes: Diaphragm, Disc, Spacer Washers

Repair Kit Includes: Diaphragm, Disc, Spacer Washers, Epoxy Coated Disc Retainer, Epoxy Coated Diaphragm Washer, Protective Washer

Rebuild Assembly Includes: Diaphragm, Disc, Spacer Washers, Epoxy Coated Disc Retainer, Epoxy Coated Diaphragm Washer, Protective Washer, Stainless Steel Bolts & Washers (6" & Below), Stainless Steel Studs, Nuts, & Washers (8" & Above), Stem, Stem Nut, Disc Guide, Standard Cover Spring, Cover Washer

Stud & Nut Kit Includes: Stainless Steel Bolts & Washers (6" & Below), Stainless Steel Studs, Nuts, & Washers (8" & Above)

Repair Kits for 100-02/100-21 Powertrol and 100-03/100-22 Powercheck Main Valves**For:** Powertrol and Powercheck Main Valves—150 Pressure Class Only**Includes:** Diaphragm, Disc (or Disc Assembly) and O-rings and full set of spare Spacer Washers.

Valve Size	Kit Stock Number 100-02	Valve Size	Kit Stock Number	
			100-02 & 100-03	100-21 & 100-22
3/8"	9169901H	2 1/2"	9169910J	N/A
1/2" & 3/4"	9169902F	3"	9169911G	9169905J
1"	9169903D	4"	9169912E	9169911G
1 1/4" & 1 1/2"	9169904B	6"	9169913C	9169912E
2"	9169905J	8"	99116G	9169913C
		10"	9169939H	99116G
		12"	9169937B	9169939H

Larger Sizes: Consult Factory.

Repair Kits for 100-04/100-23 Hy-Check Main Valves**For:** Hy-Check Main Valves—150 Pressure Class Only**Includes:** Diaphragm, Disc and O-Rings and full set of spare Spacer Washers.

Valve Size	Kit Stock Number		Valve Size	Kit Stock Number	
	100-04	100-23		100-04	100-23
4"	20210901B	N/A	12"	20210905H	20210904J
6"	20210902A	20210901B	14"	20210906G	N/A
8"	20210903K	20210902A	16"	20210907F	20210905H
10"	20210904J	20210903K	20"	N/A	20210907F
			24"	N/A	20210907F

Larger Sizes: Consult Factory.

Repair Kits for Pilot Control Valves (In Standard Materials Only)**Includes:** Diaphragm, Disc (or Disc Assembly), O-Rings, Gaskets or spare Screws as appropriate.

BUNA-N® (Standard Material)				VITON (For KB Controls)	
Pilot Control	Kit Stock Number	Pilot Control	Kit Stock Number	Pilot Control	Kit Stock Number
CDB	9170006C	CFM-9	12223E	CDB-KB	9170012A
CDB-30	9170023H	CRA (w/bucking spring)	9170001D	CRA-KB	N/A
CDB-31	9170024F	CRD (w/bucking spring)	9170002B	CRD-KB (w/bucking spring)	9170008J
CDB-7	9170017K	CRD (no bucking spring)	9170003K	CRL-KB	9170013J
CDH-2	18225D	CRD-18	20275401K	CDHS-2BKB	9170010E
CDHS-2	44607A	CRD-22	98923G	CDHS-2FKB	9170011C
CDHS-2B	9170004H	CRL (55F, 55L)	9170007A	CDHS-18KB (no bucking spring)	9170009G
CDHS-2F	9170005E	CRL60/55L-60	9170033G	102C-KB	1726202D
CDHS-3C-A2	24657K	CRL60/55L60 1"	9170042H		
CDHS-8A	2666901A	CRL-4A	43413E		
CDHS-18	9170003K	CRL-5 (55B)	65755B		
CDS-4	9170014G	CRL-5A (55G)	20666E		
CDS-5	14200A	CRL-18	20309801C		
CDS-6	20119301A	Universal CRL	9170041K		
CDS-6A	20349401C	CV	9170019F		
CFCM-M1	1222301C	X105L (O-ring)	00951E	Buna-N®	
CFM-2	12223E	102B-1	1502201F		
CFM-7	1263901K	102C-2	1726201F		
CFM-7A	1263901K	102C-3	1726201F		
				CRD Disc Ret. (Solid)	C5256H
				CRD Disc Ret. (Spring)	C5255K

Repair Assemblies (In Standard Materials Only)

Control	Description	Stock Number
CF1-C1	Pilot Assembly Only	89541H
CF1-CI	Complete Float Control less Ball and Rod	89016A
CFC2-C1	Disc, Distributor and Seals	2674701E
CSM 11-A2-2	Mechanical Parts Assembly	97544B
CSM 11-A2-2	Pilot Assembly Only	18053K
33A 1"	Complete Internal Assembly and Seal	2036030B
33A 2"	Complete Internal Assembly and Seal	2040830J

When ordering, please give complete nameplate data of the valve and/or control being repaired. MINIMUM ORDER CHARGE APPLIES

CLA-VAL

1701 Placentia Ave • Costa Mesa CA 92627 Phone: 949-722-4800 • Fax: 949-548-5441 • E-mail: info@cla-val.com • www.cla-val.com

© Copyright Cla-Val 2019 Printed in USA Specifications subject to change without notice.

N-RK (R-04/2019)



آدرس دفتر مرکزی: ایران - تهران - بزرگراه شهید آیت الله اشرفی اصفهانی - خیابان پیامبر شرقی
خیابان شاهد - خیابان گلستان بیست و ششم - پلاک یک - واحد پنج - کد پستی ۱۴۷۳۶۸۷۷۸۵
تلفن دفتر مرکزی: ۹۱۰۹۲۰۷۶ - ۹۸۲۱ +
تلفن همراه: ۹۸۹۳۹۹۶۰۳۸۰۰ +
آدرس پست الکترونیکی: info@atapars.com
آدرس سایت: www.atapars.com